

## **DESCRIPTION**

Single-wall ventilation system for supplying combustion air to a room-air independent stove. An integrated flue gas damper prevents the circulation of cold air when the stove is not in operation.

Installation in coordination with authorised chimney sweep. Make sure that the flap is open when the appliance is operating

